




Lenovo ThinkPad T420s LCD Fuse Replacement

Most of the time when the screen becomes constantly dimm/dark it is because the fuse is blown



Written By: Spoofo9t9

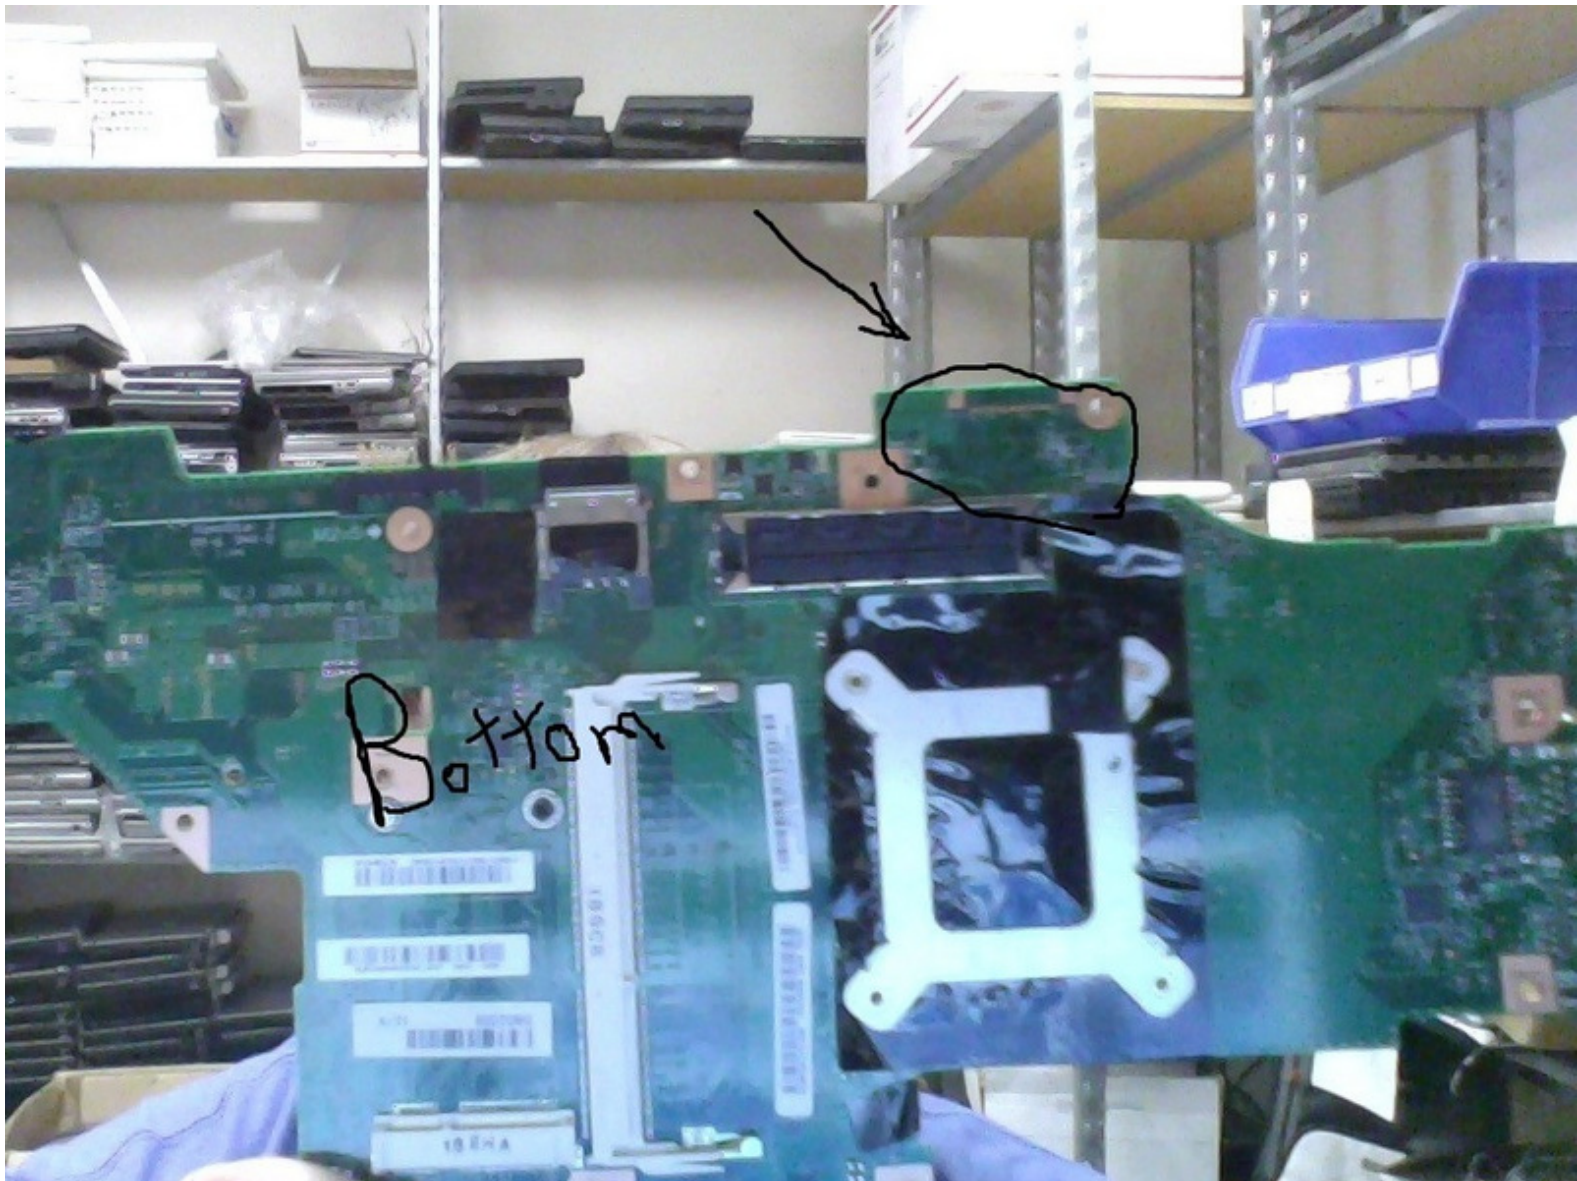

INTRODUCTION

Most of the time when the screen becomes constantly dimm/dark it is because the fuse is blown

Step 1 — LCD

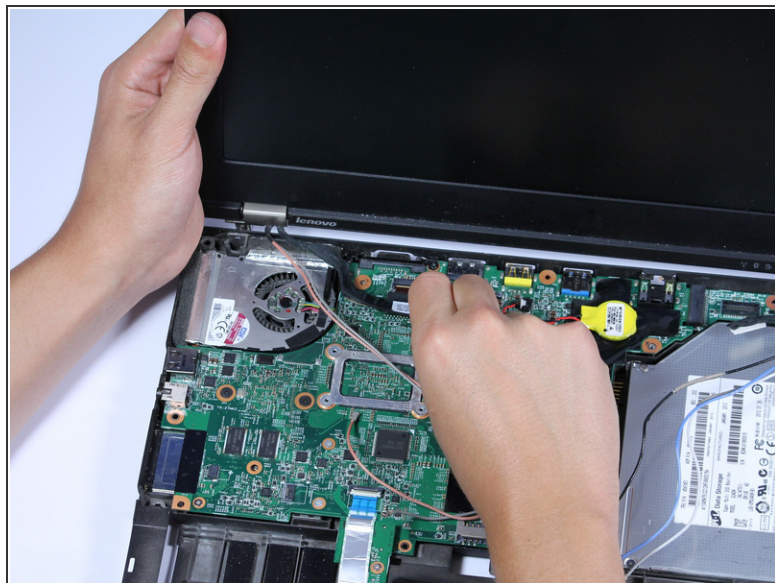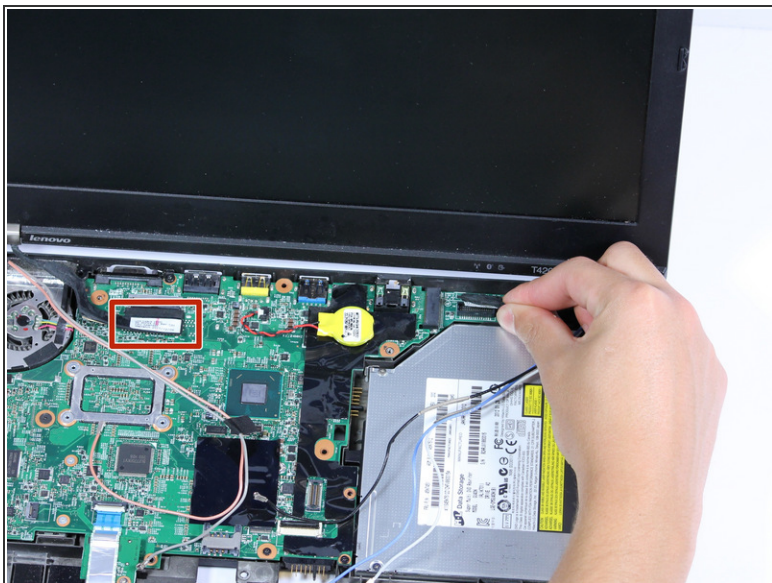

- Unplug the two black cables that connect the screen to the motherboard.

Step 2




- Flip your laptop so the back-side is facing towards you.
- Remove any black stickers covering the screws using the nylon or metal spudger.
- Remove the two 7mm screws using the Phillips #0 screwdriver.

Step 3



- Remove the LCD screen unit by holding the sides and lifting it upwards.

Step 4 — Bottom of Motherboard

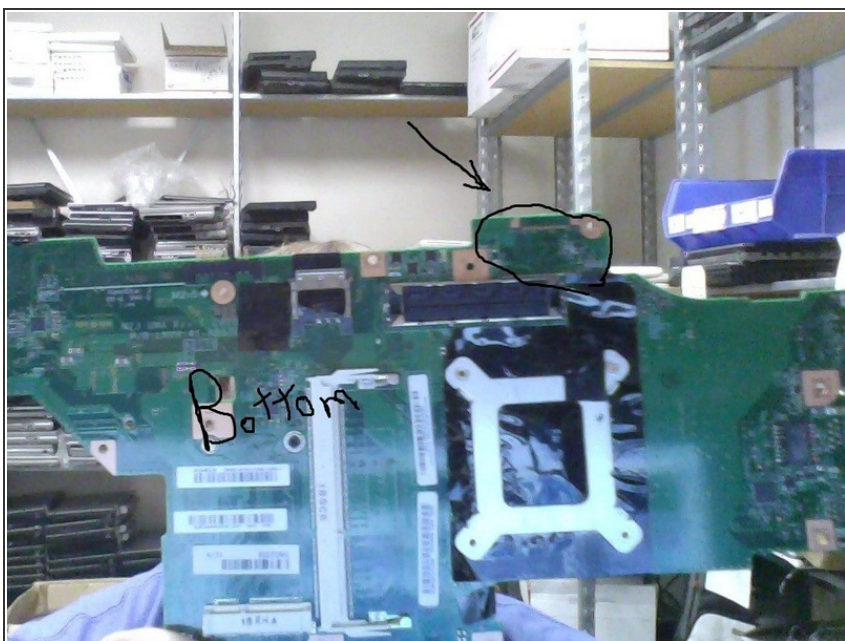

- you will need to take the tape of in order to get to the fuse

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-05 08:29:19 PM.